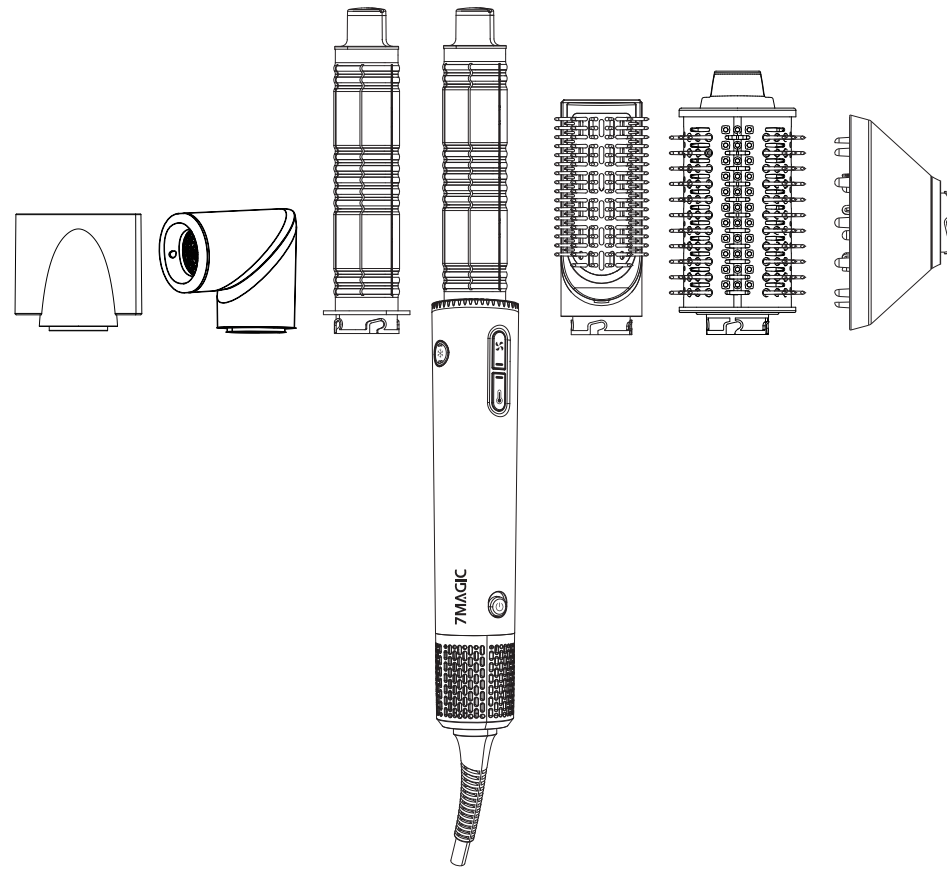 
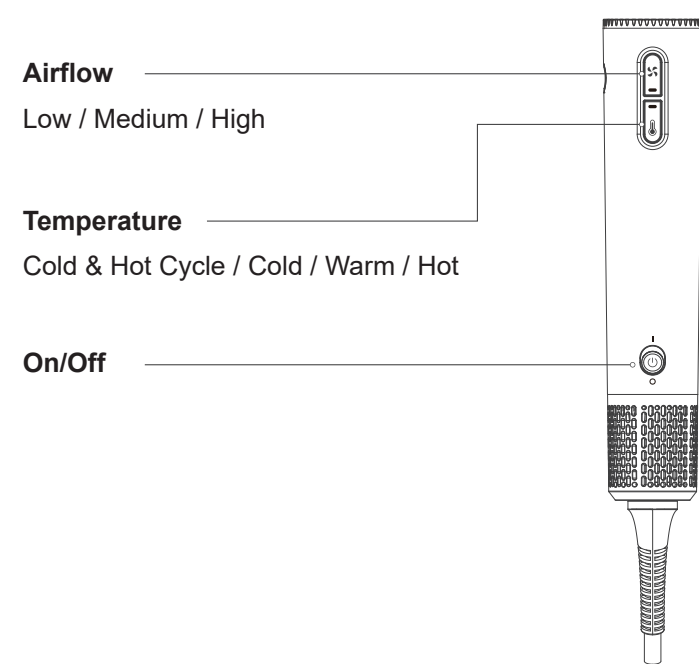 
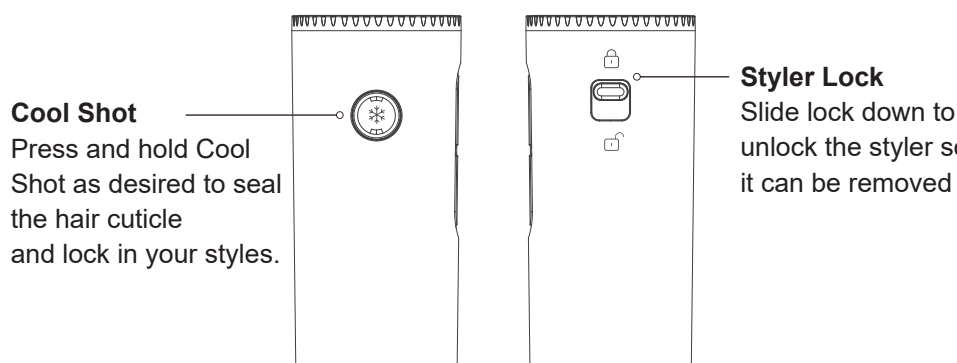 
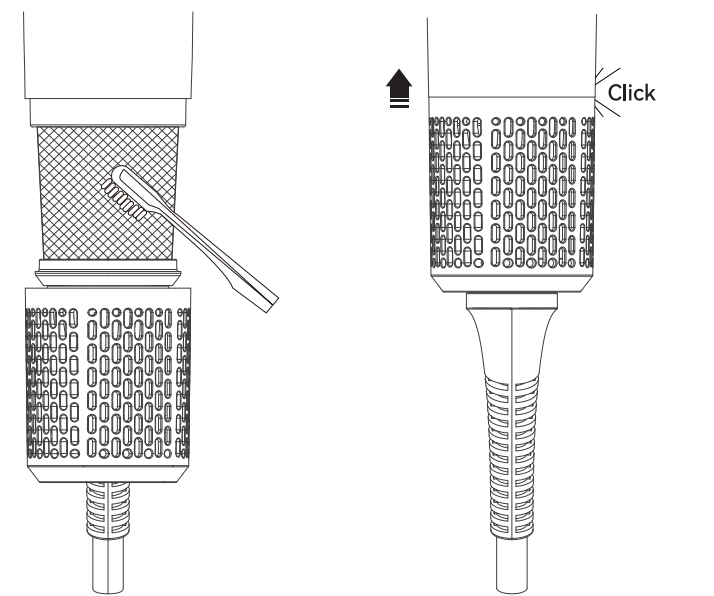 
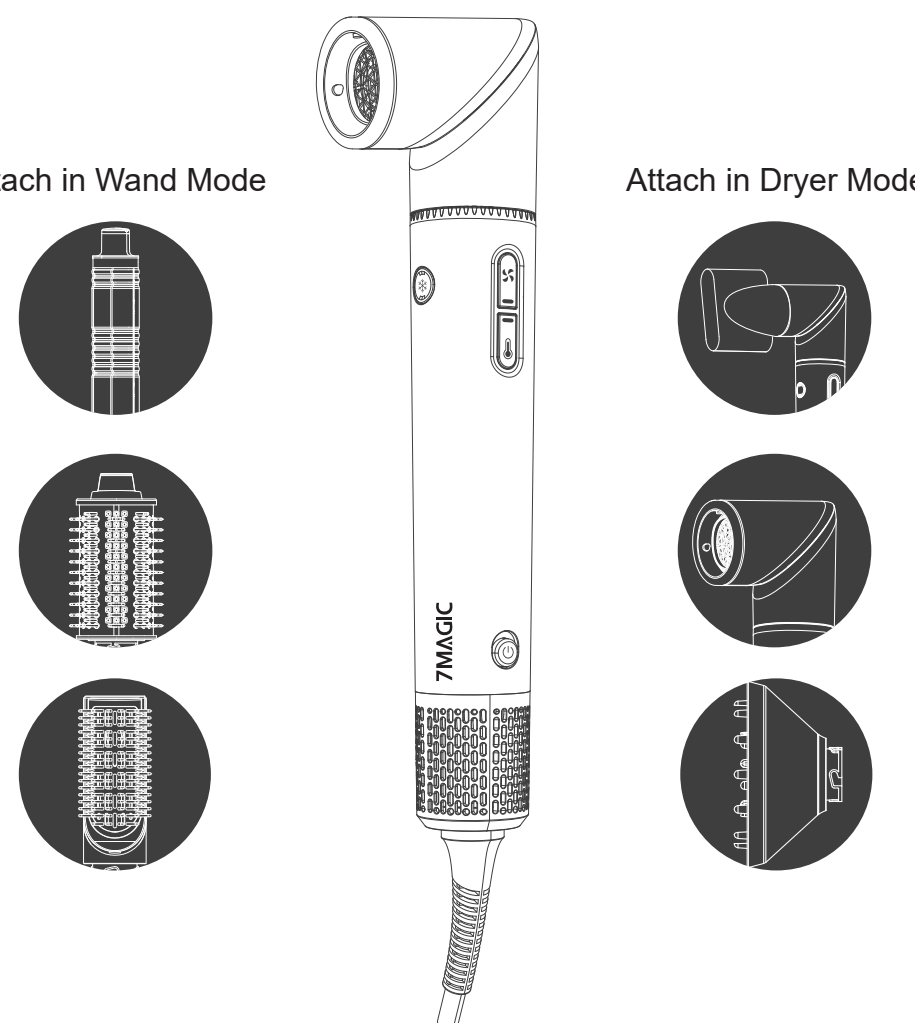 
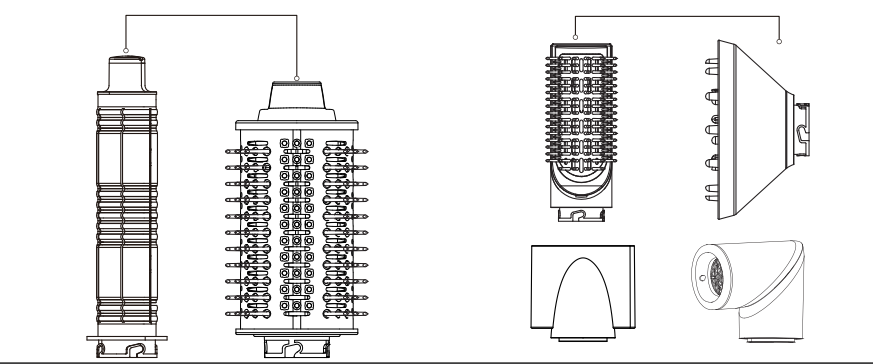 
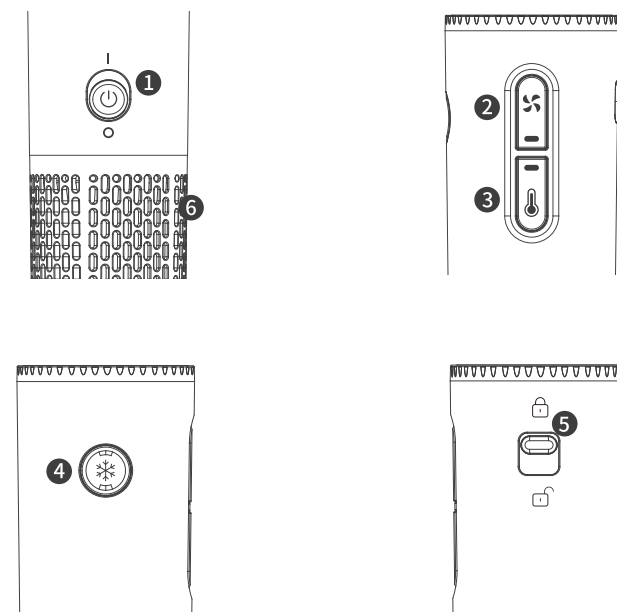 
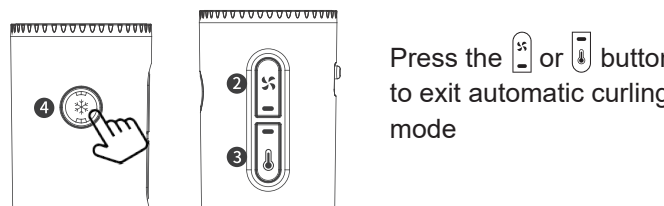 
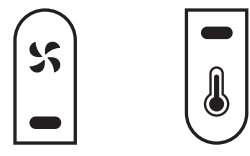 


EN 7MAGIC Air Styling & Drying System TD-2301  USER MANUAL	Get to know your 7MAGIC FlexStyle. Air Styling & Drying System. Table of Contents How it Works-----1-2 Transform from Styler to Dryer-----3 Get to Know Your Stylers-----4 Important Safety Instructions-----5-6 Operating Instructions-----7-8 Overheating Error Code-----9 Warranty-----10 Obtaining Services-----11 Troubleshooting-----12	How it works  Basic Parameters <table><tr><td>Product name</td><td>Air Styling & Drying System</td></tr><tr><td>Model number</td><td>TD-2301</td></tr><tr><td>Rated voltage</td><td>220-240V</td></tr><tr><td>Rated frequency</td><td>50/60Hz</td></tr><tr><td>Rated power</td><td>1400W</td></tr><tr><td>Product dimensions</td><td>Ø44.8*218mm/Ø1.76*8.58in</td></tr><tr><td>Date of manufacture</td><td>See product packaging</td></tr></table>	Product name	Air Styling & Drying System	Model number	TD-2301	Rated voltage	220-240V	Rated frequency	50/60Hz	Rated power	1400W	Product dimensions	Ø44.8*218mm/Ø1.76*8.58in	Date of manufacture	See product packaging	 Do not rinse the stainless steel filter with water as this may cause it to not work correctly. Use a dry lint-free cloth, soft brush or toothbrush to remove any debris stuck to the surface of the airflow filter or stainless steel filter. After cleaning, insert the air inlet filter into the handle slot, and listen for a "click," indicating that the magnet is in place and the installation is complete. 	Transform from styler to dryer. Rotates to change modes Styling Wand Mode/ Hair Dryer Mode 	Get to know your stylers. 1 Auto-Wrap Curlers Hassle-free curls in seconds. •Uses air power to automatically wrap hair around the barrel, from ends to roots •2 curler barrels to create curls in both directions 2 Oval Brush Smooths & defrizzes, adds volume & bounce Smoothing bristles-on the rounded edge for grabbing, smoothing, and shining Detangling bristles-in the middle for combing and detangling 3 Styling Concentrator Style& dry at the same time Rotates for easy styling 4 Paddle Brush Comb and straighten, smooth your hair while drying 5 Diffuser Ensures even drying from roots to tips and adds volume Cool Touch Locations Hold the Cool Touch location to remove the accessory after use. 	7MAGIC SAFETY WARRANTY TROUBLESHOOTING IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following: FOR HOUSEHOLD USE ONLY READ ALL INSTRUCTIONS BEFORE USING-SAVE THESE INSTRUCTIONS WARNINGS: KEEP AWAY FROM WATER DANGER- As with most electrical appliances, electrical parts are electrically live even when the switch is off. WARNING To reduce the risk of death by electric shock: 1.Always unplug the unit immediately after using. 2.Do not use while bathing. 3.Do not place or store appliance where it can fall or be pulled into a tub or sink. 4.Do not place in or drop into water or other liquid. 5.If an appliance falls into water, unplug the unit immediately. Do not reach into the water.																																					
Product name	Air Styling & Drying System																																																								
Model number	TD-2301																																																								
Rated voltage	220-240V																																																								
Rated frequency	50/60Hz																																																								
Rated power	1400W																																																								
Product dimensions	Ø44.8*218mm/Ø1.76*8.58in																																																								
Date of manufacture	See product packaging																																																								
WARNING To reduce the risk of burns, electrocution, fire, or injury to persons: 1.An appliance should never be left unattended when plugged in. 2.Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities. 3.Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. 4.Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. 5.Keep the cord away from heated surfaces. 6.Do not wrap the cord around the appliance. 7.Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like. 8.Never use while sleeping. 9.Never drop or insert any object into any opening. 10.Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. 11.Do not use an extension cord with this appliance. 12.Do not direct hot air toward eyes or other heat-sensitive areas. 13.Attachments may be hot during use. Allow them to cool before handling. 14.Do not place appliance on any surface while it is operating. 15.While using the appliance, keep your hair away from the air inlets. 16.Do not operate with a voltage converter. 17.Only use the appliance with the voltage, frequency and power shown on the rating label on the product. Storage, Cord Safety, and Maintenance/Cleaning: •Ensure the cord is not knotted, twisted, or wrapped around any nearby objects when in use. •Store the unit in a dry location away from water and other heat sources. Store brush accessories so the bristles are not touching any surfaces to help prevent bristle damage. •Clean the filter at the bottom of the unit monthly. To clean the filter, first slide the filter cover off the bottom of the unit. Then use a new toothbrush to brush off any dust or debris on the filter. Once the filter is clean, slide the filter cover back on the unit until it clicks in place. •Remove any hair on the brush accessories after every use to help maintain performance.	OPERATING INSTRUCTIONS 1.Turn the styler on and off. 2.Adjust the airflow. Pressing the button allows you to choose a low, medium, or high airflow. 3.Press this button to select cold airflow temperature, medium temperature, or high temperature alternating conversion. 4.Press and hold the button to release cold air. 5.To change from styling wand mode to hair dryer mode, slide down the lock and rotate the nozzle left. Keep rotating the nozzle until it clicks into place in hair dryer mode. To change from hair dryer mode to styling wand mode, slide down the lock and rotate the nozzle right. 6.To remove the filter cover, slide it off the bottom of the unit. To attach the filter cover, slide it back on to the bottom of the unit until it clicks in place. 	This Air Styling & Drying System is Designed Specifically for Micro Hair Styling. Manual Mode Micro-styling Design Instructions: First, turn on the hot air for 10 seconds, or until 80% of the hair is semi-dry. Turn on the cold air for 5 seconds after absorbing the hair to set the look. Note: Please keep in mind that different hair types may necessitate a varying amount of time for micro-styling. The setting time for hair styling is also vary. Just keep in mind to do the hair styling design at the appropriate time. Once hit the cold air button while the automatic gears are engaged, the heating element will not operate. To blow cold air, just the engine and negative ions are functional. Automatic Mode To start the curling mode automatically, quickly press the cold air button.(The two LEDs have a red light that flashes twice.) In the automatic curling mode, a curling cycle is formed by the maximum temperature working for 10 seconds (The temperature LED flashes red and illuminates, and cold wind working for 5 seconds (The temperature level LED flashes a vivid blue color). The entire article enters the low-temperature, low-speed gear once one cycle is complete. Press it once more to start the second curling cycle (Any brief press of the cold air button will cause the curling cycle calculation to be restarted). Pressing the wind speed or wind temperature key throughout the cycle duration will end the automatic curling mode. 	TROUBLESHOOTING & ERROR CODES MAINTENANCE/CLEANING Reduction in Airflow. Make sure you are not covering the filter cover with your hand when operating the unit. This will block the air inlet, which could cause a reduction in airflow. A change in airflow or air power, airflow blockages, and/ or visible buildup on the inlet at the bottom of the unit could also indicate your unit needs to be cleaned. To maintain performance, clean the filter at the bottom of the unit every month, using a new toothbrush. OVERHEATING Hair dryer is overheating or shuts off This unit is equipped with a temperature-protective thermostat. If for some reason your hair dryer overheats, the thermostat will automatically turn the unit off. To prevent power-down recurrence, unplug the hair dryer and set it aside to cool, or cool down using the cool shot button during use. Overheating may result if the unit is powered on for a long duration, or can indicate a blockage or dust buildup. To prevent overheating, clean the filter at the bottom of the unit every month, using a new toothbrush. Make sure you are not covering the filter with your hand when operating the unit, as this could also cause overheating. Overheating Error Code (Both temperature and speed buttons are on) 	Product Warranty Card <table><tr><td>User name</td><td></td></tr><tr><td>Postal address</td><td></td></tr><tr><td>Contact number</td><td></td></tr><tr><td>Product name and model number</td><td></td></tr><tr><td>Product serial number</td><td></td></tr><tr><td>Date of purchase</td><td></td></tr></table> Repairs Record <table><tr><th></th><th>Description of the issue and replacement parts</th><th>Date of repair</th><th>Repair center</th></tr><tr><td>01</td><td></td><td></td><td></td></tr><tr><td>02</td><td></td><td></td><td></td></tr></table> NOTE: THIS WARRANTY TERM GIVES YOU SPECIFIC LEGAL RIGHTS,AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE 12-month Warranty & Lifetime Customer Support Only apply to eligible purchases made directly from the 7MAGIC authorized distributors. Warranty coverage applies to the original owner and to the original product only and is not transferable. How to initiate a warranty claim: If your appliance operates improperly while in use under normal household conditions within the warranty period, please visit our official website www.7magicclub.com to fill out the warranty form to initiate a warranty claim. All rights are reserved by 7MAGIC.	User name		Postal address		Contact number		Product name and model number		Product serial number		Date of purchase			Description of the issue and replacement parts	Date of repair	Repair center	01				02				How to get service If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit www.7magicclub.com for product care and maintenance self-help. Our Customer Service Specialists are also available at www.7magicclub.com to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. How state law applies This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.	Troubleshooting <table><tr><th colspan="2">ERRORS</th><th>Diagnostics</th><th>Solution</th></tr><tr><td rowspan="4">Does not function when turning on</td><td>Blue light indicator flashing warning</td><td>Inner components have overheated Air inlet or outlet is blocked</td><td>Turn off and return after 1 min, if it does not work, send it back for repair. Overcurrent and short circuit protection</td></tr><tr><td>Orange light indicator flashing warning</td><td>Inner components are damaged Overcurrent and short circuit protection</td><td>Send back for repair</td></tr><tr><td>Red light indicator flashing warning</td><td>Protection program has started Input voltage error</td><td>Do not turn on and off continuously or repeatedly Input voltage error</td></tr><tr><td>No light indication</td><td>Power not connected Light ring PC is damaged</td><td>Check the electricity supply voltage</td></tr><tr><td rowspan="4">Function when turning on</td><td>No reaction when pressing hot wind button</td><td>Hot air button is damaged</td><td rowspan="4">Send back for repair</td></tr><tr><td>Heater gets red</td><td>Control PC is damaged</td></tr><tr><td>Wire or plug overheated</td><td>Wire is damaged or the plug is loose</td></tr><tr><td>Smells burnt while operating</td><td>Inner components damaged</td></tr></table>	ERRORS		Diagnostics	Solution	Does not function when turning on	Blue light indicator flashing warning	Inner components have overheated Air inlet or outlet is blocked	Turn off and return after 1 min, if it does not work, send it back for repair. Overcurrent and short circuit protection	Orange light indicator flashing warning	Inner components are damaged Overcurrent and short circuit protection	Send back for repair	Red light indicator flashing warning	Protection program has started Input voltage error	Do not turn on and off continuously or repeatedly Input voltage error	No light indication	Power not connected Light ring PC is damaged	Check the electricity supply voltage	Function when turning on	No reaction when pressing hot wind button	Hot air button is damaged	Send back for repair	Heater gets red	Control PC is damaged	Wire or plug overheated	Wire is damaged or the plug is loose	Smells burnt while operating	Inner components damaged
User name																																																									
Postal address																																																									
Contact number																																																									
Product name and model number																																																									
Product serial number																																																									
Date of purchase																																																									
	Description of the issue and replacement parts	Date of repair	Repair center																																																						
01																																																									
02																																																									
ERRORS		Diagnostics	Solution																																																						
Does not function when turning on	Blue light indicator flashing warning	Inner components have overheated Air inlet or outlet is blocked	Turn off and return after 1 min, if it does not work, send it back for repair. Overcurrent and short circuit protection																																																						
	Orange light indicator flashing warning	Inner components are damaged Overcurrent and short circuit protection	Send back for repair																																																						
	Red light indicator flashing warning	Protection program has started Input voltage error	Do not turn on and off continuously or repeatedly Input voltage error																																																						
	No light indication	Power not connected Light ring PC is damaged	Check the electricity supply voltage																																																						
Function when turning on	No reaction when pressing hot wind button	Hot air button is damaged	Send back for repair																																																						
	Heater gets red	Control PC is damaged																																																							
	Wire or plug overheated	Wire is damaged or the plug is loose																																																							
	Smells burnt while operating	Inner components damaged																																																							